

AfterSchool Edge™ - Version 12 Tip Sheet

Keyboard Shortcuts

| <u>Functions</u> | <u>Key Combinations</u> |
|--|--|
| To exit a program: | ALT + F4 or CTRL + SHIFT + ESC |
| To end a session: | CTRL + ALT + END |
| To enable whiteboard usage: | CTRL + ALT + W |
| To switch between main monitor and external monitor: | CTRL + ALT + D |
| To grab a screenshot, saved to shared folder: | ALT + G |
| Audio (if enabled): | Increase volume: ALT + (plus key) Decrease volume: ALT - (minus key) Mute sound: ALT + S |

Tips and Shortcuts

| <u>Select Titles</u> | <u>Navigation Tips</u> |
|--|--|
| To skip intro or credits: | For most programs, press the spacebar or click on the screen. |
| BBC Science Simulations 2 | To exit an activity click on the 'i' button, then click on the Simulation Menu button and click confirm to return to the main menu. To print, copy or save, click on the camera image at the top right of the screen. The teach options password is "control." |
| Britannica titles | Press CTRL + B to bookmark a page. |
| ClueFinders 3rd and 4th Grade | Click on the hovering yellow robot to see program options. |
| Eyewitness History of the World | To access Options, click on the gauge that is above the question mark on the left-hand side of the screen. |
| Fingertapps Applications | Instruments Band only supports two players on our touch screen computers. Fingertapps applications do not support Gestures from within the application. |
| Grammar for the Real World | To access Menu, move pointer to the top of the screen. |
| Kid Pix 3D | To access the Menu, move your mouse pointer to the top of screen until it turns into an outlined triangle and click. |
| Krazy ArtRoom | To access the File Manager for printing, opening and printing documents click the pink folder in the top left. All shortcuts are displayed in Help by clicking on the green book with the question mark. Exported files are .bmp format only. |
| Math for the Real World | To access Menu, move pointer to the top of the screen. |
| Millie's Math House, Sammy's Science House, Trudy's Time & Place House | Click the 'Stop' sign to exit the program. Click F5 at any time to restart the application. Press the A key to display keyboard shortcuts within the application. |
| MusiCan 1, 2-3 | The access the Teacher's area, use the password "Melody." To print the Group Summary in the Teacher's area, set the page orientation to landscape in the printer options. |
| MusiCan 4-5 | The access the Teacher's area, use the password "Harmony". To print the Group Summary in the Teacher's area, set the page orientation to landscape in the printer options. To exit MusiCan use the keyboard shortcut ALT + F4, do not use CTRL + SHIFT + ESC. |
| Reading Blaster 9-12 | Click on the gadget in the lower left corner of the screen to view a map and other information. |
| Return to Mechania | The Teacher Options password is "control." |
| Space and the Universe | To access Options, click on the gauge that is above the question mark on the left-hand side of the screen. |
| Stationery Studio | Press CTRL + N to switch from main application menu to "Choose a Theme" menu. |
| Volcanic Panic | The Admin password is "Admin", this password can be changed. If changed please document it. |
| World of Goo | To exit, you must use the keyboard shortcut ALT + F4. |

*The above list is not intended to be a comprehensive list of either all of the applications nor all of the keystroke functionality within those applications.

Support: 866.463.6357 | Sales: 888.293.0272 | info@awelearning.com
www.awelearning.com

General Tips:

- For smoother operation, re-boot the system daily.
- For applications that have “online” options, you may encounter an error message; if this occurs, hit ESC.
- We have created Guest accounts for many of the content programs that require user accounts.
- Some programs may not save your progress if you exit using the Windows button or exit gesture, we recommend exiting these programs using their own exit button.

Gestures

Common keyboard shortcuts can be accessed using our unique touch screen gestures (only available on supported hardware).

To use gestures: Touch & Hold...Draw

Touch & hold one finger on the screen until a circle is displayed, then draw the gesture in one motion. The gesture will be shown on the screen in blue. You can also draw gestures by pressing the right mouse button and draw the gestures in one single motion.



End
Session



Exit
Application




Grab
Screenshot



Mute
Sound



Whiteboard
Tools

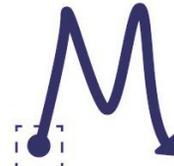

Admin
Panel



External
Monitor