


Early Literacy Station™ Tablet - Bilingual Spanish Edition - Version 12 Tip Sheet

Gestures

Touch & hold one finger on the tablet screen until a dotted-line square is displayed, then **draw** the gesture in one motion. The gesture will be shown on the screen in blue.

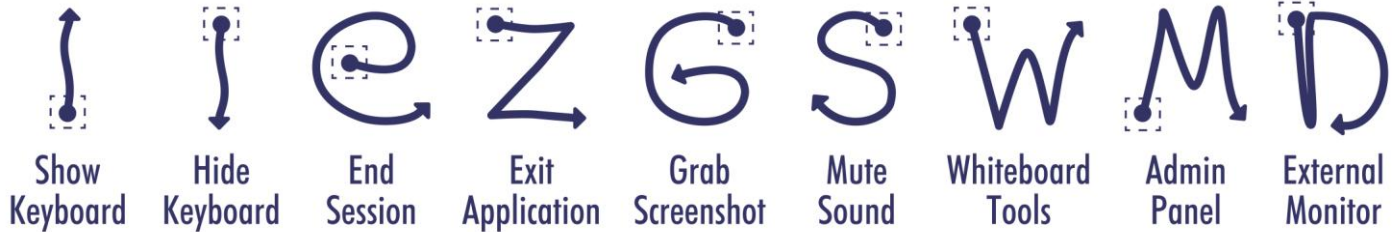

Tips and Shortcuts

Select Titles	Navigation Tips
General Tip	You may need to double-tap your finger with some programs that require drag and drop.
ClueFinders 3rd and 4th Grade	Click on the hovering yellow robot to see program options.
Fingertapps Applications	Instruments Band only supports two players on our touch screen computers. Fingertapps applications do not support Gestures from within the application.
Kid Pix 3D	The camera is not available in KidPix 3D.
Krazy ArtRoom	To access the File Manager for printing, opening and printing documents click the pink folder in the top left. All shortcuts are displayed in Help by clicking on the green book with the question mark. Exported files are .bmp format only.
La Clase de Dibujo	To change language between English and Spanish, click on the cat.
Millie's Math & Sammy's Science	Click the 'Stop' sign to exit the program. Click F5 at any time to restart the application. Press the A key to display keyboard shortcuts within the application.
MusiCan 1, 2-3, 4-5	In MusiCan 2-3 & 4-5 use the Show Keyboard (up arrow) gesture to display the keys needed for some of the games. To access the Teacher's area, you must access the keyboard before starting the program. Use the gesture to show the keyboard, then start MusiCan, and then select the Teacher button. For MusiCan 1 & 2-3, the password is "Melody" and for MusiCan 4-5 the password is "Harmony". To print the Group Summary in the Teacher's area, set the page orientation to landscape in the printer options.
Reader Rabbit Toddler	To exit click on the small 'star' in the lower right of the screen.
Wanderful Applications	The title screens are displayed in English; the stories are loaded in the correct language.

*The above list is not intended to be a comprehensive list of either all of the applications nor all of the keystroke functionality within those applications.

Support: 866.463.6357 | Sales: 888.293.0272 | info@awelearning.com
www.awelearning.com

General Tips:

- We have created Guest accounts for many of the content programs that require user accounts.
- Some programs may not save your progress if you exit using the Windows button or exit gesture, we recommend exiting these programs using their own exit button.
- Some programs appear with a black border; this is normal. Gestures do not work in the black border area of an application.
- For smoother operation, re-boot the system daily.