


Early Literacy Station™ Tablet - English Edition - Version 12 Tip Sheet

Gestures

Touch & hold one finger on the tablet screen until a dotted-line square is displayed, then **draw** the gesture in one motion. The gesture will be shown on the screen in blue.

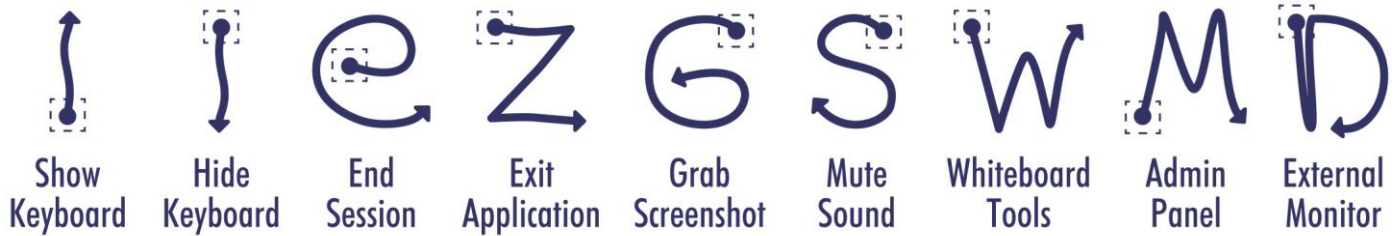

Tips and Shortcuts

Select Titles	Tips
General Tip	You may need to double-tap your finger with some programs that require drag and drop.
ClueFinders 3rd and 4th Grade	Click on the hovering yellow robot to see program options.
Fingertapps Applications	Fingertapps applications do not support Gestures from within the application.
JumpStart Advanced Kindergarten	To show the car controls for the reward game use the Show Keyboard (up arrow) gesture.
KidPix 3D	The camera is not available in KidPix 3D.
Krazy ArtRoom	To access the File Manager for opening and printing documents, click the pink folder in the top left. All shortcuts are displayed in Help by clicking on the green book with the question mark. Exported files are .bmp format only.
Math Blaster	In the Gnat Zapper game, use the Show Keyboard (up arrow) gesture to display the onscreen keyboard for controlling the game.
MusiCan 1, 2-3, 4-5	In MusiCan 2-3 & 4-5 use the Show Keyboard (up arrow) gesture to display the keys needed for some of the games. To access the Teacher's area, you must access the keyboard before starting the program. Use the gesture to show the keyboard, then start MusiCan, and then select the Teacher button. For MusiCan 1 & 2-3, the password is "Melody" and for MusiCan 4-5 the password is "Harmony". To print the Group Summary in the Teacher's area, set the page orientation to landscape in the printer options.
Reader Rabbit Learn to Read with Phonics	Click on the balloons in the upper right-hand corner for Options.
Space and the Universe	To access Options menu, click on the gauge that is above the question mark on the left-hand side of the screen.
USA Explorer	In the Weather Report activity, to place the weather symbols, first tap the symbol, then touch and wait for the click sound. Then drag the weather symbol onto the map.
Volcanic Panic	The onscreen keyboard is shown when the application starts, but you can move the keyboard and to enter user details. The administrative password is "Admin." This password can be changed. If you change it, please document the change.

*The above list is not intended to be a comprehensive list of either all of the programs nor all of the keystroke functionality within those programs.

Support: 866.463.6357 | Sales: 888.293.0272 | info@awelearning.com
www.awelearning.com

General Tips:

- We have created Guest accounts for many of the content programs that require user accounts.
- Some programs may not save your progress if you exit using the Windows button or exit gesture, we recommend exiting these programs using their own exit button.
- Some programs appear with a black border; this is normal. Gestures do not work in the black border area of an application.
- For smoother operation, re-boot the system daily.