



AWE Learning Tablet Gestures

The Early Literacy Station™ and AfterSchool Edge™ tablet solutions include built-in gestures so you can easily navigate your tablet.

To successfully use gestures, you must first:

1. Hold your finger on the screen until you see a square around your finger.
2. Draw the gesture below to begin your desired action.

Onscreen Keyboard

To type in an application, you must use the onscreen keyboard. Show the keyboard: Draw a line gesture upward to show the onscreen keyboard.

Hide the keyboard: Draw a line gesture downward to hide the keyboard.



Show Keyboard Hide Keyboard

Exit an Application

To exit the current application, draw a letter Z to automatically close the program and return to the kids desktop.



Exit Application

Mute Audio

To mute or unmute sound, draw the letter S to silence the tablet. When silenced, drawing the letter S again will unmute the sound.



Mute Sound

Control Panel

To access the Administrative Control Panel, draw a letter M on your screen. The Admin Panel allows you to change settings on your workstation.



Admin Panel